



Daily Cleaning Procedure

AIRACK LITE Care Card

LIFT OFF THE DRYER COVER

STEP 1

Isolate the electrical supply and remove the Dryer Cover from the base.

STEP 2

Clean the top of the cover using a damp cloth. Clean the underside of the cover using a damp cloth, paying particular attention to the air nozzles and base matting surfaces.


STEP 3

Clean the airflow area using a damp cloth.

Do not use proprietary cleaning agents. The odours will contaminate the glasses.


STEP 4

Reassemble the unit, reconnect the electrical supply and operate several cycles before use.

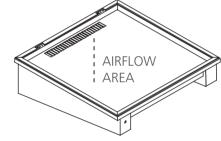

Cautionary Notes

- ✓ Always use a full load of glasses and place the basket centrally onto the Airack (top is recessed for location – Fig 1).
- ✓ Ensure the correct orientation of compartmented baskets. The glasses should be tilted forward to the front of the Airack (Fig 2).
- ✓ Never use the Airack for dregs, or liquid disposal.
- ✓ Never use the Airack for any other purpose other than drying glassware.

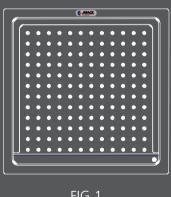

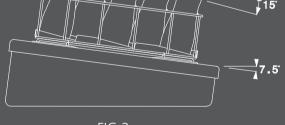


FIG 1

FIG 2

Using The Airack Lite



Switch on the power to the Airack.



At the end of the drying cycle the unit will automatically switch off and will remain off until the timer is switched on again.



Immediately after the washing process, place a full basket of glasses on top of the unit and rotate the timer to the desired time to start the drying cycle.



When the drying cycle is complete, remove the basket of clean dry glasses for immediate use, or to storage.

If You Require Help













